

### Technical data sheet

# Type C101DS

### Control valve

Pressure reducing valve with double direction flow

Applications and general characteristics



NB: Additional information is available on the data sheet listed as «Main valve».

- This valve controls and maintains a preset reduced downstream pressure regardless of variations in demand and upstream pressure (the setting of downstream pressure is always below the upstream pressure).
- Equipped with 2 check valves, it opens fully when upstream pressure is lower than downstream pressure.
- It allows to decrease the pressure in a secondary network or in a tank. When the upstream pressure is getting lower than downstream pressure, the flow rate in the secondary network or in the tank reverses.
- Approvals : ACS

Ductile iron (except DN 125: cast iron)

nickel-plated brass

nickel-plated brass Stainless steel - brass

Stainless steel or brass

Brass-stainless steel-bronze


Brass-stainless steel-bronze


Brass-stainless steel-bronze

nickel-plated brass Brass

### Working principle

By standard working, the upstream pressure is higher than the downstream pressure, check valve J1 is closed and check valve J2 is open. The main valve A is working like a pressure reducing valve C101.

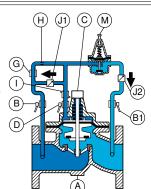


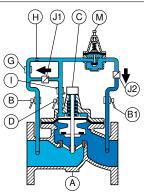

When the upstream pressure is getting lower than the downstream pressure, check valve J2 closes. Check valve J1 opens and allows the upper chamber to empty.

The main valve A opens.

# Installation example and spare parts list

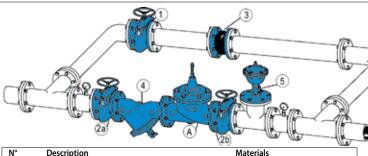

٧°	Description
4	Main valve
3	Upstream isolation valve
31	Downstream isolation valve
2	Position indicator with drain
)	Chamber isolation valve
5	Filter

H Orifice-needle valve
I Flow control
J1 Check valve
J2 Check valve
M Pilot valve C101

Pilot valve C101 Isolation valve of the by-pass Rubber expansion joint

Single function air valve

3 Rubber expansion joint
2a Upstream isolation valve of the main water pipe.
2b Downstream isolation valve of the main water pipe.

ukc101ds - Updated 29/09/2009

## Setting range:

- 0,4 up to 5,51 bar
- 1,72 to 8,5 bar (standard)
- 2,06 to 24,5 bar

#### / Installation:

- install a strainer upstream
- install an air relief valve downstream or at the high point near the control valve..
- horizontal setting up: the cap of the valve should be oriented to the top and inclined at 45° maximum.
- vertical setting up : change the spring of the main valve (option 7)

#### Other types:

- FKM seals in the main valve and in the pilot.
- 304 stainless steel pilot and 316Tl stainless steel fittings.